



RUBY 2000 MkII Juice Extractor

NUTRIFASTER
FOOD SERVICE EQUIPMENT

Unit 7, 62-66 Newton Road, Wetherill Park, NSW, 2164
P 02 97292011 | F 02 97292012 | E Info@nutrifaster.com.au

CARE & CLEANING INSTRUCTIONS

Follow these simple steps:

1

Find a suitable container that you can soak your filter in. It will be a good idea if you obtain one solely for this purpose. Container size: approx 33cm in diameter and 25cm deep. ✓

2

In about 4-5 Litres of HOT water, dissolve 250grams (2 ½ scoops) of DET10 Cleaner/Sanitiser (or) Chlorinated dishwashing powder, as recommended by manufacturer/supplier. ✓

3

Rinse your filter under a stream of water removing as much of the pulp stuck to it as possible. Submerge the filter directly into the solution. It is important that you **do not** scrub or brush the filter with any abrasive materials or cleaning aids. Allow it to **Soak Overnight** ✓

4

In the morning, wipe over the filter basket using a sponge or kitchen cloth then thoroughly rinse it under running water. ✓

5

Ensure to follow these instructions after each day the juicer is used to avoid residue build up on your filter. For best results, it's important to ensure to make a fresh batch of solution every 4 to 5 days ✓

Note: you may also clean the blade, lock nut & collection pan in this solution to remove any build up and staining.



DET10 Cleaner/ Sanitiser (10kg drum) can be purchased from **Nutrifaster** P. 02 9729 2011 or E. info@nutrifaster.com.au ✓



Best Practice

Soak the filter basket every night in cleaner sanitizer solution

Always use quality fruit and veg, such as 'juicing carrots' for best yield output and superior taste.

If your machine vibrates or wobbles badly, clean out filter basket, if it happens regularly, review your cleaning procedures.

If your juicer is blocking up after 1 or 2 juices your basket has not been cleaned properly or your blade needs resharpening.

Suggestion: Have your filter basket serviced/reconditioned every 6-12 months. (based on usage)

Suggestion: Resharpen the cutter blade every 6-12 months.
**This can be done 3, max 4 times*

If your juicer makes a loud grinding noise, your bearing assembly may need replacing.

If your juicer makes a humming noise and it won't start, the centrifugal on/off switch may need replacing. **Contact Nutrifaster**



Not Advisable

Do not over-tighten the latches, they only hold the lid down.

Do not use scourers, brushes, abrasive cleaning aids or steel wool to clean filter basket.

Do not place filter basket or top cover into a dishwasher as the harsh chemicals and heat will over time corrode them.

It's recommended **not** to juice Kale, spinach, baby spinach, silverbeet or similar green produce as this will likely clog up your filter basket.
*Ensure to use a suitable cold press juice extractor, for optimal results ask for the LB33 wheatgrass juicer**

Do not leave your filter basket in an area where it can be damaged.

Do not block the air flow of juicer, (ie. blocking the exhaust tube or holes on lid).

When juicing let the machine do its work, do not force feed fruits and veg into the juicer.

IMPORTANT:

For best results, please ensure to rigorously adhere to the outlined cleaning instructions.

Should you require parts, service or technical assistance:



02 9729 2011 | business hrs [all enquiries]
0404 878 461 | after hrs [emergencies only]
service@nutrifaster.com.au

